ICOM 2100 ICOM 2100

key pad REPEATER MEMORY

Key pad SIMPLEX MEMORY

Push 'VFO' Push 'VFO'

Push 'ENT', enter freq Push "ENT", enter freq

Push 'DUP-' or 'DUP+ Push SIMP

Puch 'FUNC' then 'TONE'
Push 'SET' (B) until 'T' and 'rt'appears
up or down key to to select freq
Push 'FUNC' then A
Push 'FUNC' again then A again
Push 'up or down keys to get memory #

Push 'FUNC' then 'CLR A'(MW)
Push 'FUNC' again then 'CLR A again

Push up or down key to get memory #

Puch 'FUNC' then 'CLR A' 1 sec 3 beeps Push 'MW'

RON GREEN KG6RLG

DELETE MEMORY

Push 'S.MW' momentary Select memory #

Push 'S.MW' briefly then again

Push FUNC then A 1 second 3 beeps

1 second. 3 beeps

Push any key

Push any key to stop'M' flashing

Push

9